

evo 8

Welcome to your new EVO 8 Audio Interface. Please read this quick guide to help get you started.

01

Connect

To connect your EVO 8 to your computer, simply plug in the USB cable provided. Once successfully connected, EVO 8's volume wheel LED's will illuminate and perform a short animation followed by the Volume button illuminating.

03

The Features

- 1 Channels 1, 2, 3 & 4
- 2 Phantom Power (for condenser microphones)
- 3 Smartgain Mode
- 4 Volume knob
- 5 Output 1 Volume Button
- 6 Output 2 Volume Button


02

Install Drivers

In order to start using your EVO 8 you will need to download and install the latest drivers, which can be found at evo.audio/evo8/downloads. Once the drivers are installed, you may be prompted to update the unit's firmware. A full installation guide and user manual can also be found on our website.

Additional Notes


Phantom Power - in order to use 4 channels of phantom power simultaneously, a USB C-C connection must be used. If you are using a USB A connection you will only be able to use 2 channels of phantom power simultaneously.

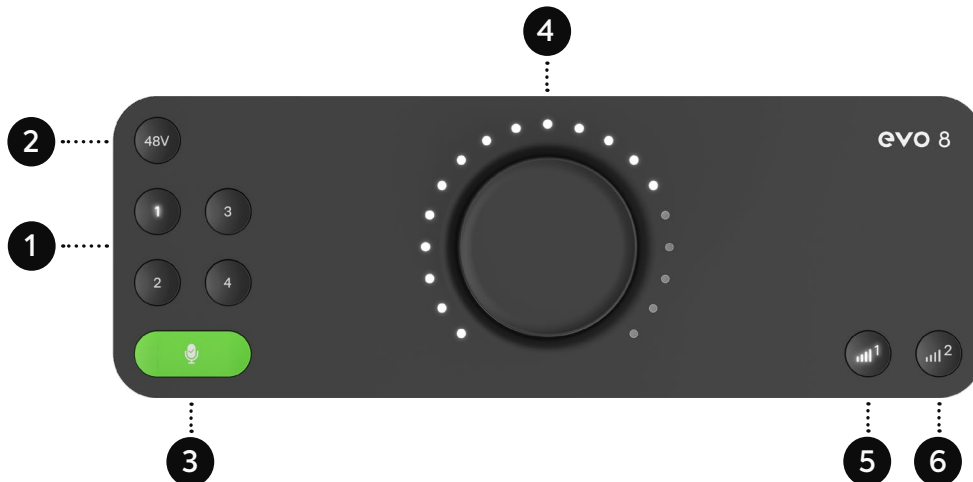






04 Smartgain Mode


- 1 Press the Smartgain button to begin



- 2 The Smartgain LED will illuminate green and the input channel LED's (1, 2, 3 & 4) will begin to flash (indicating a channel must be selected)



- 3 Press one or more of the input channel buttons to select the channels to be adjusted


- 4 Press the Smartgain button again to begin the process


- 5 The Smartgain LED will start flashing red and the volume wheel LED's will illuminate indicating that Smartgain Mode is now listening


- 6 Start playing or performing into the microphone


- 7 Smartgain Mode will dial in the correct levels and when complete the Smartgain button will flash green twice to indicate it has been successful


- 8 You are now ready to start recording

